FRDMSTBC-A8471

FRDM STBC-A8471

Freescale and the Freescale logo are trademarks of Freescale Semiconductor, Inc., Reg. U.S. Pat. & Tm. Off. All other product or service names are the property of their respective owners. © 2015 Freescale Semiconductor, Inc.
FRDMSTBCA8471QRC REV 1
920-28884 REV A

freescale

For more information, visit freescale.com/sensortoolbox

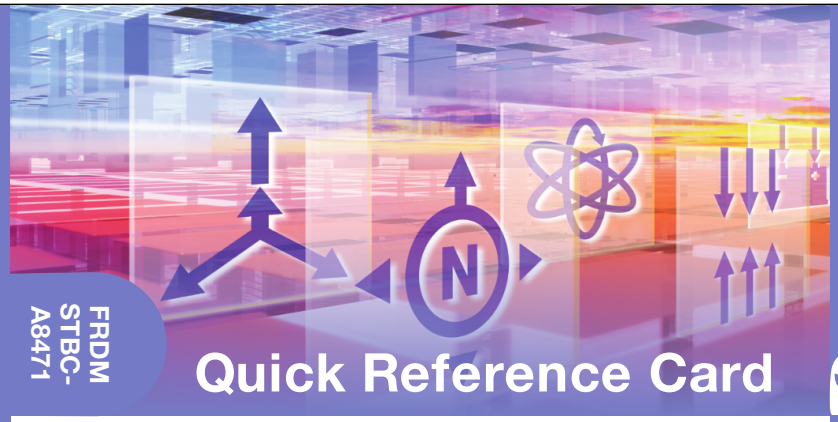

FRDM STBC-A8471

Quick Reference Card

3-Axis Sensor Toolbox Development Board

FXLS8471Q 3-axis linear accelerometer

freescale

Get Started

Download tools and documentation under **Jump-Start Your Design at freescale.com/sensortoolbox**



FREESCALE FREEDOM PLATFORM

1. Verify package contents:
   - FRDMSTBC-A8471 development board

2. Connect the FRDMSTBC-A8471 development board to a Freescale Freedom development board, such as the FRDM-KL25Z (or any Arduino R3 compatible board). Refer to the Freescale Freedom development board Quick Start Guide for driver information.

3. Plug one end of a USB cable into the SDA port on the assembly. Plug the other end of the cable into the USB port on the computer.

4. Download and install the latest Sensor Toolbox software at: **freescale.com/sensortoolbox**

5. Start the Sensor Toolbox software.

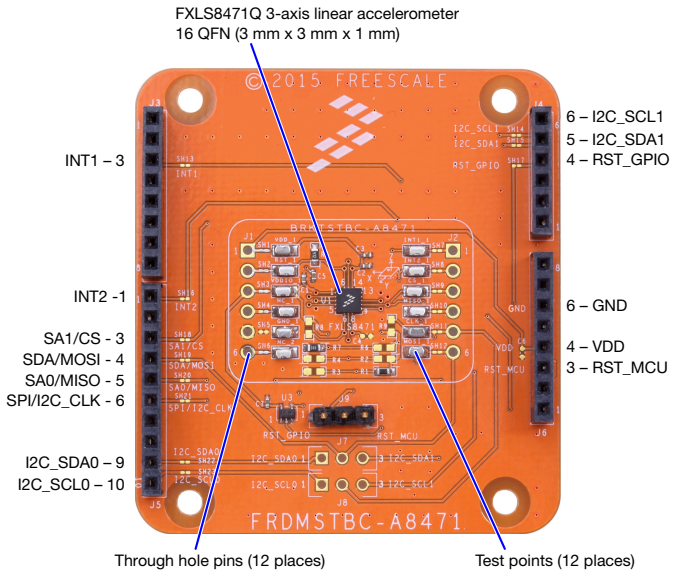

Get to Know the FRDMSTBC-A8471

freescale™

Learn more at freescale.com/sensortoolbox